


Leaks down the barrel

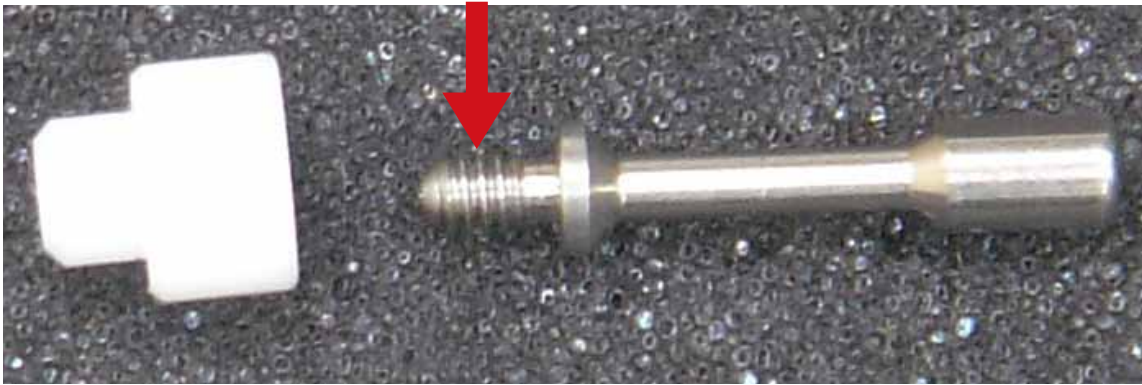

LOCTITE

POSSIBLE CAUSE: Cup seal or cup seal guide is damaged or loose

SOLUTION: Replaced cup seal or cup seal guide/ Apply Loctite on the threaded side of cup seal guide. Loctite needs 24 hrs for successful drying



POSSIBLE CAUSE: Front Valve O-Ring (R012) is damaged

SOLUTION: Replace Front Valve O-Ring



POSSIBLE CAUSE: Damaged Valve

SOLUTION: Replace Valve