


# Leaking from ASA



**POSSIBLE CAUSE:** O-Ring on the air tank is damaged

**SOLUTION:** Replace the O-Ring on the Air Tank

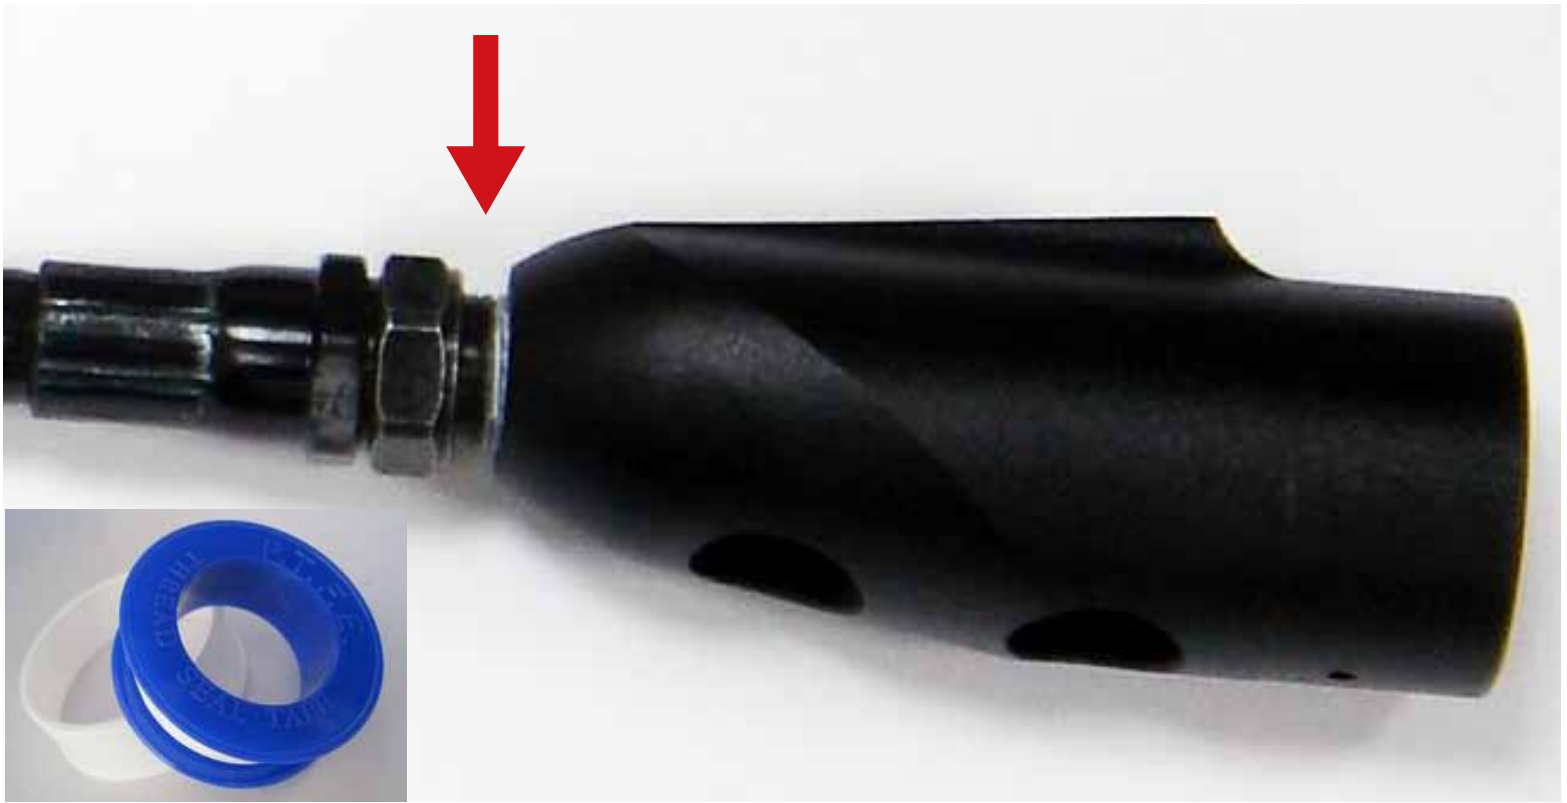

Thread Seal Tape

**POSSIBLE CAUSE:** Braided Hose ( P071) is loose from Bottom ASA ( A021)

**SOLUTION:** Apply Thread Seal Tape and reconnect Braided Hose to Bottom ASA.