


Eye sensor is not working

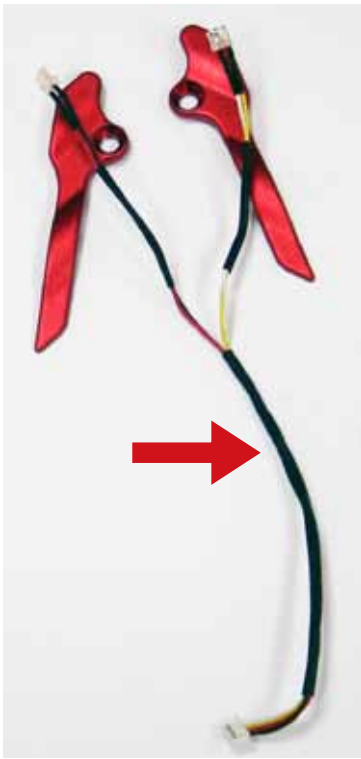



POSSIBLE CAUSE: Damaged eye sensor wire.

SOLUTION: Check for the cuts and the plug on the cables.



POSSIBLE CAUSE: Sensor is back to front.

SOLUTION: reinstall sensors to face each other.